

 
L100II OPERATION INSTRUCTION

Before Operation


Note:

1. The L100II lock is equipped with a high security key for manual lock operation; Three keys are included. Remove mechanical keys from the packaging and keep them in a safe place.
2. To power the lock, four alkaline AA batteries (not included) are required. Non-alkaline and rechargeable batteries ARE NOT RECOMMENDED.
3. By Default, the L100II lock is configured to grant ANY fingerprint access to unlock the device.

Structure

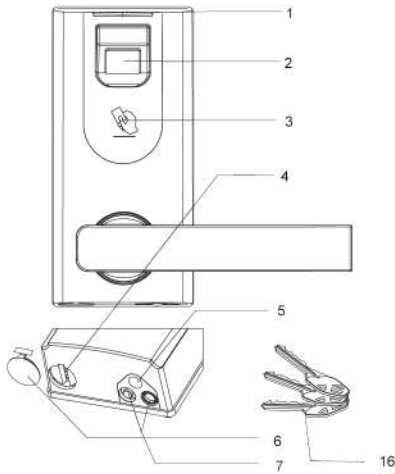

 - 1 LED indicator
- 2 Fingerprint sensor
- 3 ID card area
- 4 Mechanical key hole
- 5 Reset button
- 6 Rubber key cover
- 7 9V emergency power terminal

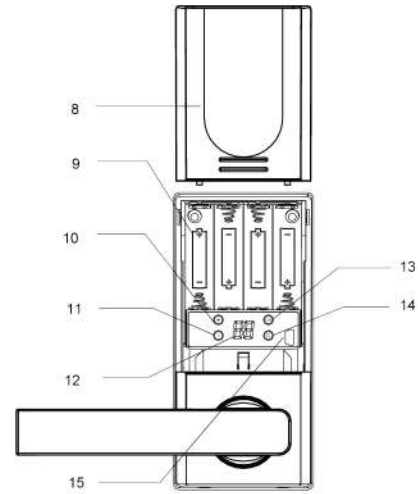

User Operation

User Introduction

Administrator: This will normally be an official in the company or the host of a family who will have administrator permissions and will be able to do various operations. The L100II can set 4 administrators and ID will be 96-99.

 
Normal user: This will be a user under administrator's management who will be granted access to open the lock. The L100II can set 95 normal users and ID number will be 01-95.

The Nixie tube tip characters:

- "--": active
- "Ad": need Administrator identification.
- "FP": Delete user who is identified by fingerprint or card.
- "AL": Delete all the users.
- "01"-"95": ID range for normal user. (95 user capacity)
- "96"-"99": ID range for administrator.(4 administrator capacity)


Register First Administrator

On the initial use of the fingerprint lock. Please follow steps to set administrator.

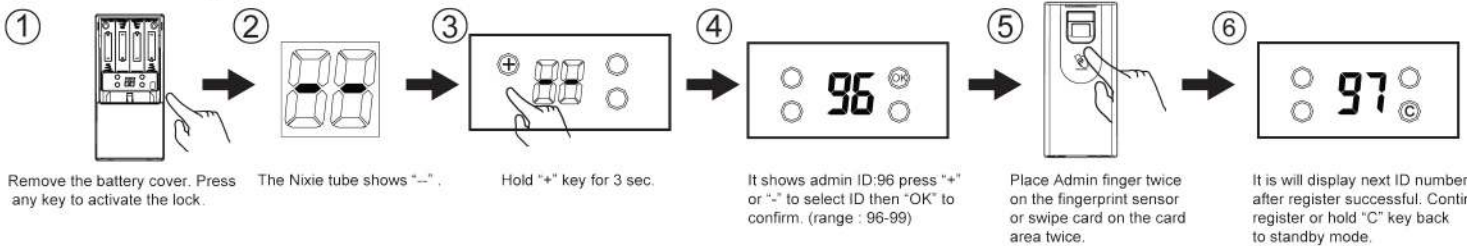


* Notice: One ID can only register one fingerprint or one card. And after registration is completed, please try identifying registered finger on the fingerprint sensor and turn the handle to open the lock.

 Register another Administrators

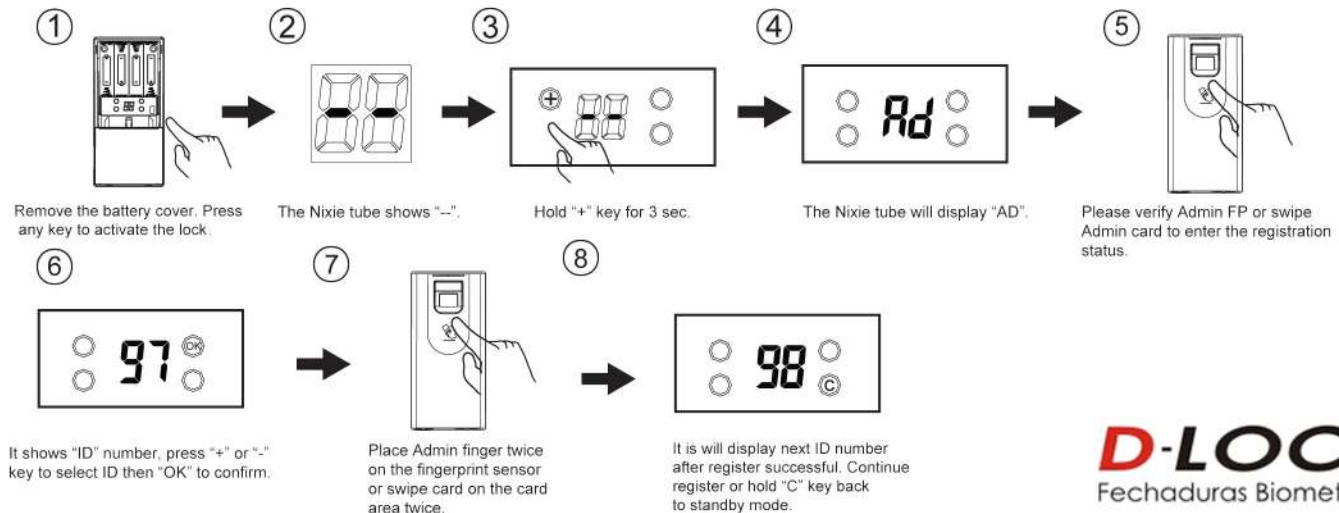


* Notice: After registration is completed, please try identifying registered finger on the fingerprint sensor turning the handle to open the lock.

 
Register Normal User

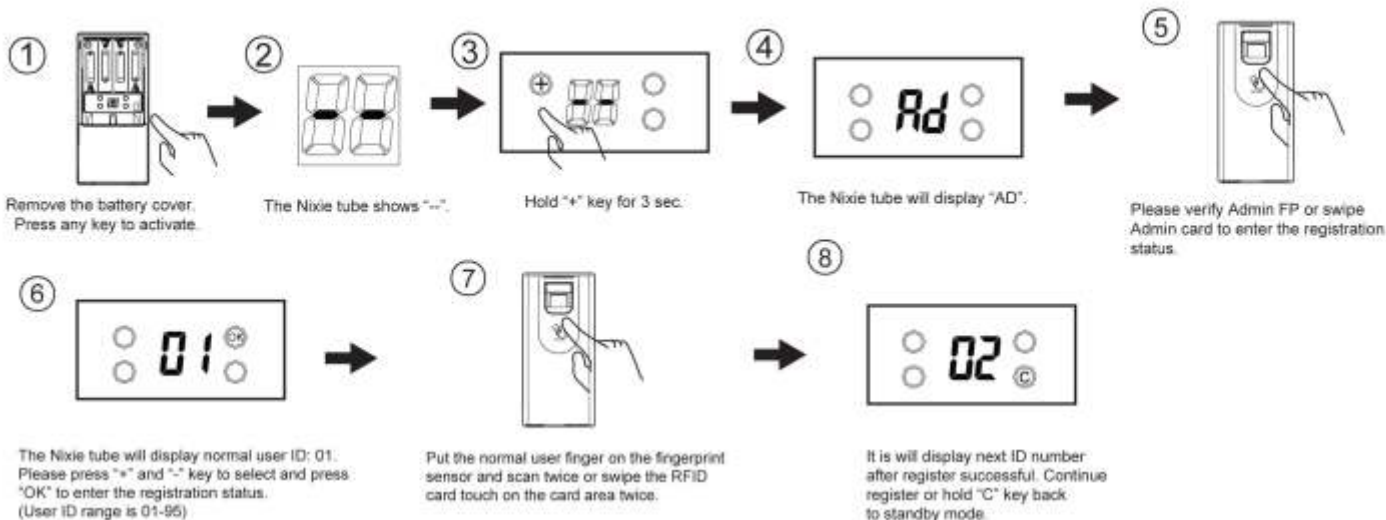

Delete Normal User

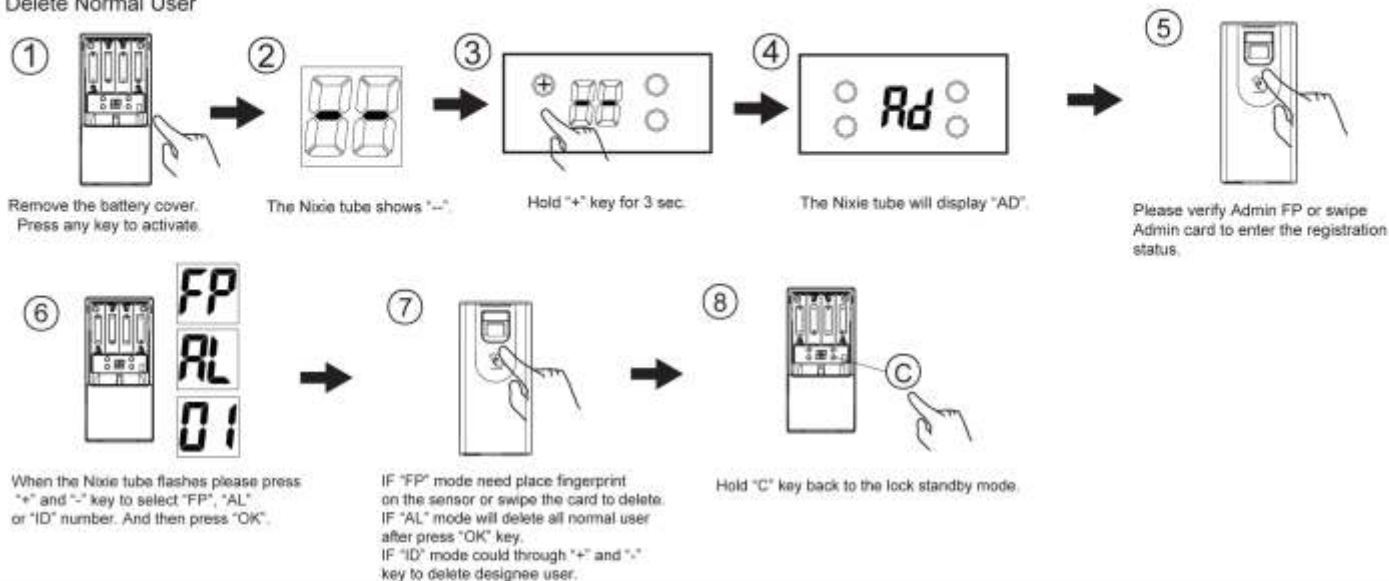 

Delete Admin User

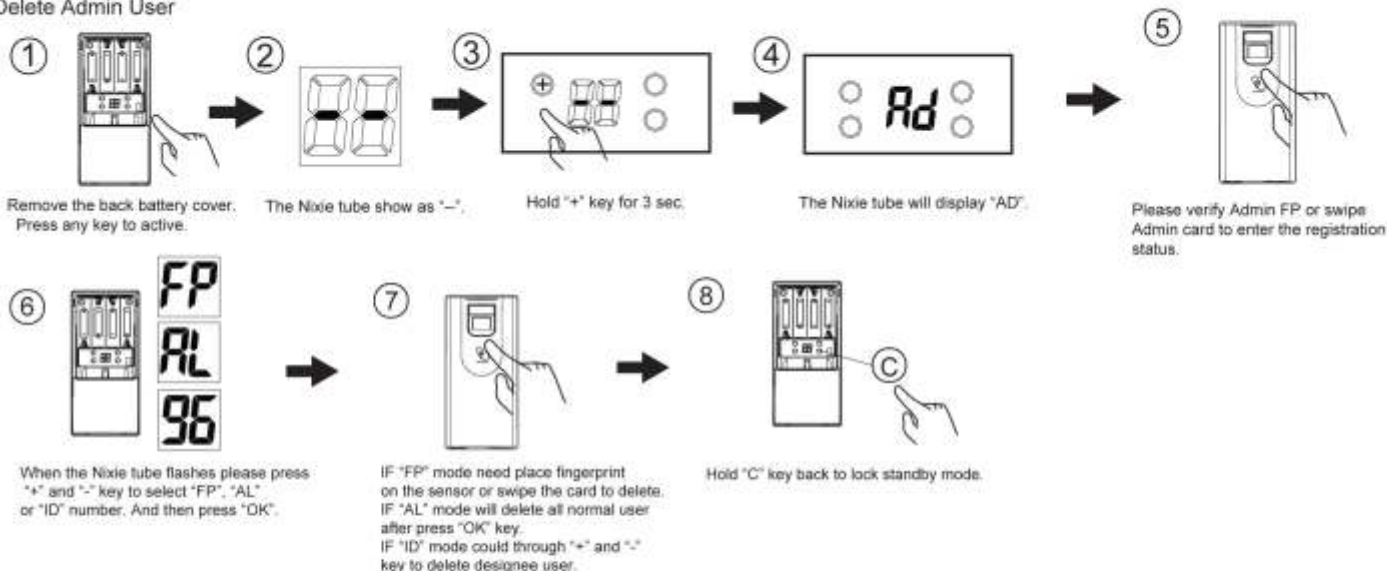 

Free entry mode

Free entry mode enables you to open the lock without Fingerprint identification, which is fit for meeting room and some offices which need continuously in or out.

Enable: Verify any registered fingerprint or card on L100II. Then press "OK".
Disable: Press "C" key.

Power saving mode

Power saving mode enables you to disable or enable card reading function.
Disable: Verify any registered fingerprint or card on L100II. Then press "-".
Enable: Verify any registered fingerprint on L100II. Then press "+".